

SNX

Inserting a Prefix and/or Suffix with the CCD Scanner

Revised: 9-10-98

Your CCD scanner can be programmed to insert an **keyboard function** as a prefix or suffix. Simply follow the steps below to program.

***** Please note if your scanner's firmware is older than version 1.93, you may not be able to use all of these functions.** To find out how you can upgrade your CCD Scanner's firmware, please contact our Customer Service department at **(800) 447-9639**, or go to our web site at **www.snx.com**.

To check the version number of your firmware, simply scan the following 2 codes.

Enter Group 3



Review



You will then see a message appear on screen similar to the one below. If you have version **1.93** or higher, your scanner will have the ability to use all of these functions.

MS-28X VERSION V1.96 JUL,22,1996

FUNCTION KEY = YES; UPPER/LOWER CASE = LOWER;
LANGUAGE = U.S.;

You may then scan the **Exit** code below and proceed to the programming steps on page 2.

Exit



Step 1. Start



Step 2. Enter Prefix



Step 3. Enter prefix characters (choose characters from Full Ascii Chart or from this page).

Step 4. Exit Prefix



Step 5. Enter Suffix



Step 6. Enter suffix characters (choose characters from Full Ascii Chart or from this page).

Step 7. Exit Suffix



Step 8. Exit



Some bar codes to enter as prefixes or suffixes:

Enter



Right Enter Key (PC users can use this selection with Filemaker Pro)



Tab



Return



Space



If this document does not resolve your problem, please contact SNX technical support at:

PLEASE NOTE: Technical support is not available from our toll free number. All registered users requiring technical support must call (718) 369-2944.

SNX Technical Support Hours: Mon-Fri 10am-6pm EST

692 10th Street

Brooklyn, NY 11215

Phone: (718) 369-2944

Fax: (718) 768-3997

World Wide Web:

www.snx.com

Email:

support@snx.com