

SNX

Setting Terminator options with the Bar Code Pro Reader Revised: 2-27-98

Step 1. Enter Programming



Step 2. Terminator



Step 3. (choose only one)

Enter (default)



Return



Field Exit



None



Step 4. Exit Programming



Step 5.

Scan your code and see the changes you have made to the terminator.

If this document does not resolve your problem, please contact SNX technical support at:

If this document does not resolve your problem, please contact SNX technical support at:

PLEASE NOTE: Technical support is not available from our toll free number. All registered users requiring technical support must call (718) 369-2944.

SNX

Technical Support Hours: Mon-Fri 10am-6pm EST

692 10th Street

Brooklyn, NY 11215

Phone: (718) 369-2944

Fax: (718) 768-3997

World Wide Web:

www.snx.com

Email:

support@snx.com